

6.9.5 Network settings

Error Message : Invalid SIM Card. If You receive this message, then the SIM Card Operator You are trying to use, was not prior validated by NEOI. There are more than 10,000 GSM and 3G Operators globally, and being a GLOBAL FASHION-FON , Neoi cannot list all 10,000 Operators. In that case a user has to validate and setup that specific Operator using the Neoi Manual Network Setting procedure. Please follow below steps and the new Network will be set up easy.

Note: Many Operators sell pre-paid SIM Cards, or operators that are 3rd class and have a sub-license from a Class A operator, these SIM cards MUST also be set up manually, as Neoi does not recognize these services automatically.

Menu > Settings > Network Setup



In this menu, you can set network parameters

Option	Description
Network Selection	Search for the network in Automatic or Manual mode.
Referred Network	Set the preferred network.
GPRS	Select "Always" or "Connect when needed".





>OK> >Select Network>



>Network List > Select the proper Network>

Note: The Network Search shall be done with a valid GSM Card, or in some countries can also use the preferred Network SIM Card to validate operations, this depends on the Operators terms and Roaming agreements. Some Operators do not allow set up of Phones that have not been contracted with their Network, in that case the entire Network Selection Setup has to be done with a Valid GSM Card (could be in roaming mode from a foreign Operator).

1.9.6 Security Settings

In this menu, you can protect your device against unauthorized use.

Menu > Settings > Security Setup



>Sim Lock default OFF

<p align="center">SIM Card Lock</p>	<p>If this function is enabled, you need to enter the PIN upon each start-up, thus protecting your device against unauthorized use. To disable this function, you also need to enter the PIN.</p>
--	--



> Phone

Lock default OFF

<p align="center">Phone Lock</p>	<p>If this function is enabled, you must enter the phone code upon each start-up. Note: The original phone code is 0000.</p>
---	---



> Keypad / Touch Screen Lock shall be

<p align="center">Keypad Lock</p>	<p>Set the automatic keypad lock of your device, press Confirm to enter the Setting screen. Select Off (to invalidate keypad lock function), 5sec, 30sec, 60sec, or 5min to lock the keypad when no operation is made on the device within the specified time.</p>
--	---



set to ON > select time>> For change of Passwords go



to > Pin 1 and Pin 2 are given by the SIM card provider> Neoi Phone Password and Factory reset Password default is either 000 or



1122 > input always old password first to change any password!

Change Password	Set a new password, including PIN1, PIN2 and phone lock code. Please remember your new password.
------------------------	---

Option	Description
Fixed Dialing	The fixed dialling function allows calls to be made only to certain numbers saved in Fixed Dialling list. The fixed numbers are

	protected by your PIN2.
Restricted Dialing	The restricted dialling function requires network support and is used to restrict your outgoing and incoming calls.

Restore Factory Setting

Menu > Settings > restore Factory Setting

Rest all user settings and restore factory settings. To do this, you need to enter the phone lock code (the default code is 0000 or 1122).